



DIGI Z 8 – INSTALLATION INSTRUCTIONS

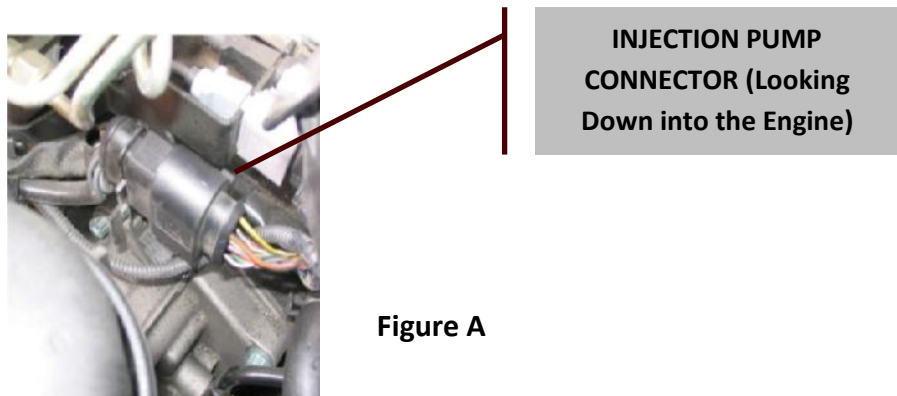

- 1) Remove Top Plastic Engine Cover. Tool: 10mm socket.
- 2) Unplug Connector to Injection Pump and Connect **Female Diesel Power (DP) Harness Plug to Male Injection Pump Connector** and **Male DP Harness Plug to Female Injection Pump Connector**.
- 3) Install DP Module In-Line with the Connector Shown Below. (Figure A)



- 4) Now Attach DP Module to DP Harness. Slide Open Purple Connector to Attach the Module and Slide Closed to Secure.
- 5) Located Next to the DP Module Connector is a Thin Black Wire. Route the Black Wire Towards the Mass Airflow Sensor on the Passenger Side of the Engine. (Figure B)

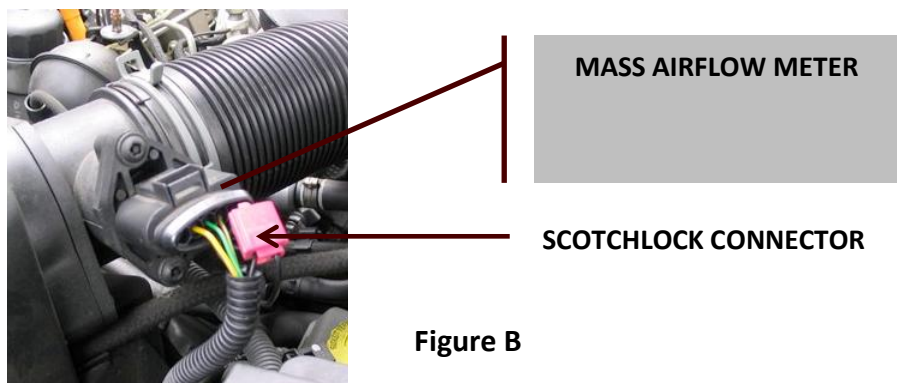

- 6) Using the Supplied Red Scotchlock Connector, Connect the Black Wire to the #6 Wire in the Mass Airflow Sensor Wiring Connector.
- 7) Adjust the Dial on the Potentiometer for Maximum Performance (Between 9 & C) **Settings Vary within the Same Model Year. If a Check Engine Light Appears a temporary fault code has been set and the code will reset after starting the vehicle approx.. 5 times. (** Please note: "9" is the lower setting and "C" is the highest setting.)
- 8) Secure the DP Harness, with Zap Straps Provided, to the Air Intake Piping.